

**SUPPLEMENT 19 – Other Manufacturers Equipment**

**19.1 General Information**

Ultramagic envelopes are approved for use with other manufacturers equipment as listed in section 19.8 of this Supplement. There is a uniformity of interface between the Ultramagic envelope ranges and the load frames, basket, burners and cylinders listed which allows this use. Ultramagic allow this use based on a number of requirements having been met and listed at section 8.1 of the Flight Manual.

**19.2 Limitations of use**

**Fantasy**

**19.2.2 Meteorological Limitations.**

Maximum demonstrated surface winds;  
 (a) Take off - 11km/hr (7mph)  
 (b) Landing – 19km/hr (12mph)

**19.2.5 Fuel**

**CAUTION :** Care should be exercised when pressures drop below 80 p.s.i. The best operating range is 100 – 120 p.s.i.

**WARNING :** Do not open both burner valves on the single burner at the same time.


**WARNING :** At least 2 full fuel tanks equipped with fuel quantity gauges must be fitted for takeoff with one tank connected to either side of fuel system for redundancy. Ends of fuel lines not in use **MUST** be capped.

**NOTE:** The maximum number of fuel tanks that can be carried in Fantasy baskets is four. The Fantasy E – type basket 46” x 70” is designed for use with 15 gal. Stainless steel tanks only, and will only accommodate 3 of these tanks.

**19.2.6 Loading**

The maximum take off mass is limited when using Fantasy baskets and Burners as shown in the following table. This figure must not be exceeded or the limit determined with the use of the load chart in Flight Manual section 5.2, whichever is the lower.

Envelope Volume (ft <sup>3</sup> )	Burner Type or Basket type	Maximum take off Mass (kg)
56,000	All applicable	500
65,000	All applicable	500
77,000	All applicable	659
90,000	All applicable	682
105,000	Single or dual A-type burner (round)	682
105,000	Dual F-type burner (square) only	818
120,000	Dual F-type burner (square) only	909
120,000	Dual F-type burner (square) with 46” x 70” T partition basket only	1090

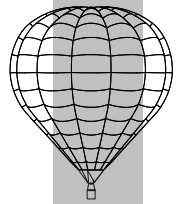

**Raven**

**19.2.6 Loading**

The maximum take off mass is limited by certain basket types as shown in the following table. This figure must not be exceeded or the limit determined with the use of the load chart in Flight Manual section 5.2, whichever is the lower.


Envelope Volume (m3)	Basket Type	Maximum take off Mass (Kg)
900	ELS & ELSS	363
1600	ELS & ELSS	522
1600	RWS	500
1850	ELS&ELSS	522
1850	RWS	560
1850	CW , CW-AFX & RWS	636
2200	ELS & ELSS	545
2200	RWSW, RWSW-AFX, CW, CW-AFX & RWS	652
2550	ELS & ELSS	545
2550	RWSW, RWSW-AFX, CW, CW-AFX, CWS & RWS	750
3000	RWSW, RWSW-AFX, CW, CW-AFX, CWS & RWS	818
3400 - 3700	CWS & RWS	909
3400 - 3700	RB5 & RB6	1011
3700 - 5100	CWS	909
3700 - 5100	RB5	1045
3700 - 5100	RB6	1136
3700 - 5100	RB8	1204
6000	RB6	1272
6000	RB8	1568
7000	RB6, RB8, TWX & NC5	1516
5100-7000	RB12	1564

**Kubíček**

**19.2.12 Burners**

**WARNING:** Only burners with independent back up may be used. The back up must consist of a functional independent whisper burner in addition to the main burner.

**CAUTION:** Burners are only tested up to the Maximum Flight Altitude of 14,000 ft.

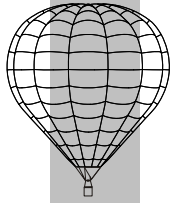

## 19.3 Emergency procedures

### **Fantasy**

#### **19.3.2 Pilot Light Failure**

If the pilot light should go out for any reason, it should be relit if possible. If this is not possible then proceed as follows.

#### Dual Burners:

Transfer control to the functioning burner.

Shut down faulty burner and drain line.

**Land as soon as possible.**

#### Single F-Type Burner

*Cylinder Fuel Valve* – closed

*Burner main valve* – locked or held open.

*Cylinder Fuel Valve* – fractionally open, to allow a small amount of fuel to the burner.

*Main Burner* – ignite with sparker, match or other source of ignition lighting several inches above the main jets.

*Cylinder Fuel Valve* – Open fully to obtain normal burn.

*Cylinder Fuel Valve* – Close to fractional setting to turn burner off but to maintain a pilot light setting.

**Land as soon as possible.**

#### Single FX/2 Burner

If operating on Red fuel system when failure occurs proceed as follows:

*By-Pass Valve (Black)* – lock open.

*Fuel Valve (Black)* – open very slightly

*By Pass burner (Black)* – ignite with sparker, match or other source of ignition several inches above by-pass jets.

*Adjust Fuel Valve* – to maintain a pilot flame about 12 inches high.

*Operate Red Fuel System* – as required to obtain normal burn.

**Land as soon as possible.**

**Note:** The Red by-pass burner can be used as a back up pilot light when operating on the Black fuel system. However the same procedure applies which is –

**Land as soon as possible.**

**Warning:** Continuous operation of a propane valve at very low settings will result in some freezing and should only be practised for the shortest periods of time required to achieve a safe landing as soon as is possible.

**Warning;** The above procedures should be practised on the ground until proficiency in manually igniting the liquid by-pass burner and main burner, is attained.

### **Raven**

#### **19 .3.2 Pilot Light Failure**


Ensure that the pilot light valves are turned on at the cylinder and the burner and attempt to relight the pilot light with the igniter.


If after two to three attempts the pilot light cannot be re-lit then carry out the following procedure.

Open the metering valve to allow a slow fuel flow and immediately ignite to provide a temporary pilot light.

Land as soon as possible.

If no re-light at all is possible prepare for an emergency landing, see Section 3.7 Emergency landing.

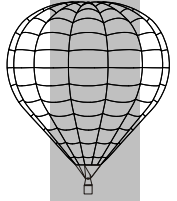

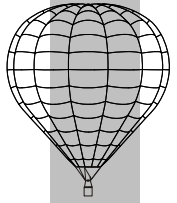

## 19.4 Standard Procedures

### 19.4.5.4 Envelope


#### **Fantasy**

**Fantasy** “E” and “F” type series gondola connections also have 4 Karabiner connection to the envelope but without a burner frame lug attachment point. In this case the Ultramagic envelope Karabiners must be attached to a “slave” Fantasy Karabiner attached to the Fantasy Gondola as shown in the applicable Flight Manual gondola connections for “F” type series connections.

#### **Raven**

**Raven Aerostar** have the following attachment system.

See figure 1. for envelope attachment for 2 point attachment bottom ends.  
See figure 2. for envelope attachment for 4 point attachment bottom ends.

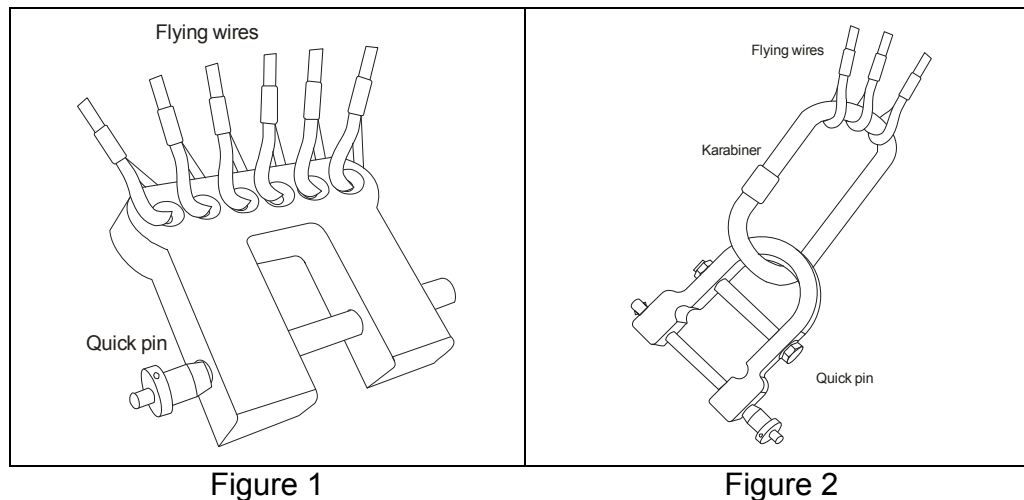

## 19.5 Loading


No change

## 19.6 Balloon and Systems Description

Refer to applicable manufacturer Flight Manual.

## 19.7 Balloon Handling, Maintenance and Care

Refer to applicable manufacture Maintenance Manual.

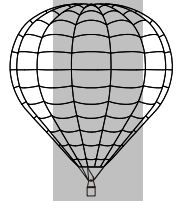**19.8 Other manufacturers equipment**


**CAMERON**  
**BASKETS BURNERS and CYLINDERS**

Basket Model / Size (cm)	Type	Empty Weight (Kg)	UM Envelope size range
Concept 60	Open	50	42-105
Concept 80	Open	56	50-145
112 x 112	Open	45	31-65
112 x 124	Open	60	56-77
112 x 147	Open	65	56-105
122 x 157	Open	70	77-160
122 x 189	Open	95	120-160
122 x 208	ST	100	120-160
135 x 195	P	100	120-180
144 x 230	ST	165	160-210
170 x 236	ST	180	160-250
170 x 282	ST	185	210-250
170 x 266	DT	195	180-250
155 x 326	DT	220	250-355
165 x 305	ST	220	210-425
170 x 305	DT	225	210-425
170 x 347	DT	245	250-425
165 x 410	DT	310	300-425

Burner Type	Empty Weight (Kg)	UM Envelope size range
Mk4 Single	17	42-90
Mk4 Double	24	42-160
Mk4 Super Double	24	42-160
Mk4 Super Triple	44	120-250
Mk4 Super Quad	55	180-425
Mk3 Double	23	56-160
Mk4 Single Shadow	17	31-42
Mk4 Super Shadow Double	24	42-210
Mk4 Super Shadow Triple	44	120-300
Mk4 Super Shadow Quad	55	180-425
Stealth Double	24	42-180
Stealth Triple	45	120-250
Stealth Quad	56	180-425
Sirocco Double	24	56-160
Sirocco Triple	46	105-250
Sirocco Quad	55	250-425

Cylinder Type	Empty Weight (Kg)	Fuel Capacity (Kg)	Basket range
CB901	3.5	2.5	All
Worthington	14	20	All
CB 497	16	20	All
CB 599	17	22	All
CB 426	22	28	All
CB 959	25	36	All
CB 2380S	13	29	All
CB 2383S	14	37	All
CB 2385S	10	23	All
CB 2387S	13	27	All
CB 2088	22	28	All
CB 2900	21	23	All
CB 2901	23	30	All
CB 2902	24	27	All
CB 2903	27	36	All


## THUNDER & COLT BASKETS , BURNERS and CYLINDERS

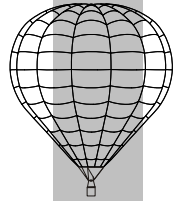

Basket Size (inches)	Type	Empty Weight (Kg)	UM Envelope size range
40 x 40	Open	48	31-77
40 x 48	Open	57	56-90
40 x 54	Open	67	65-145
40 x 60	Open	69	77-145
48 x 68	Open	105	105-160
48 x 85	P	132	120-180
60 x 87	ST	160	160-210
60 x 90	ST	170	180-250
60 x 102	ST	206	180-250
60 x 98	DT	252	180-250
60 x 118	DT	284	180-425
60 x 126	DT	415	180-425

Burner Type	Empty Weight (Kg)	UM Envelope size range
C2 Double	17	42-160
C2 Triple	25	120-210
C2 Triple + CLF	26	180-300
C2 Quad	28	180-425
Magnum/Stratus Double	22	56-210
Magnum/Stratus Double + CLF	23	90-210
Magnum/Stratus Triple	28	105-250
Magnum/Stratus Triple +CLF	31	150-300
Magnum/Stratus Quad	37	180-425

Cylinder Type	Empty Weight (Kg)	Fuel Capacity (Kg)	Basket range
Worthington	14	20	All
V 20	14	20	All
V 30	18	30	All
V 40	20	40	All

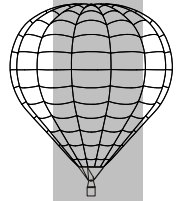


## LINDSTRAND BASKETS , BURNERS and CYLINDERS

BASKET No.	Basket Size (cm)	Type	Empty Weight (Kg)	UM Envelope size range
01	110 x 115	Open	69	42-90
02	110 x 130	Open	75	56-105
03	110 x 155	Open	88	65-120
04	100 x 85	Open	50	25-42
05	98 x 113	Open	61	42-77
06	100 x 125	Open	68	56-105
07	100 x 137	Open	70	56-105
08	125 x 145	Open	91	77-120
09	96 x 102	Open	55	42-90
10	125 x 125	Open	80	105-120
11	122 x 165	Open	101	90-160
12	122 x 185	ST	117	90-160
13	122 x 205	ST	130	120-180
14	122 x 220	ST	138	120-180
15	122 x 260	DT	152	120-210
20	152 x 205	ST	150	150-210
21	152 x 240	ST	175	180-250
22	152 x 270	ST	200	180-300
23	152 x 260	DT	230	180-250
24	152 x 300	DT	255	180-425
25	152 x 350	DT	302	180-425
26	152 x 390	DT	320	250-425
27	152 x 430	DT	430	355-425
29	152 x 325	DT	279	180-425
30	152 x 280	DT	285	180-300
31	140 x 270	DT	210	160-300
32	140 x 300	DT	230	180-425
33	140 x 390	DT	295	180-425
34	140 x 240	DT	186	120-250
35	140 x 240	ST	172	120-250
36	140 x 270	ST	196	100-425
37	140 x 340	DT	257	180-425
41	135 x 285	ST	245	180-300

BURNE R No.	Burner Type	Empty Weight (Kg)	UM Envelope size range
1	Jetstream Single	16	42-90
2	Jetstream Double	22	42-210
3	Jetstream Double + CLF	25	120-250
4	Jetstream Triple	31	120-250
5	Jetstream Triple + CLF	35	160-425
6	Jetstream Quad	42	180-425

Cylinder Type	Empty Weight (Kg)	Fuel Capacity (Kg)	Basket range
Worthington	14	20	All
V20	14	20	All
V30	18	30	All
V40	20	40	All
T30	10	30	All

- A single 5 Ton Lindstrand Karabiner (and the corresponding tether ring) may be used on UM envelopes of size 210 and over, when fitted with the appropriate flying wires and all Lindstrand Flight Manual limitations are met.

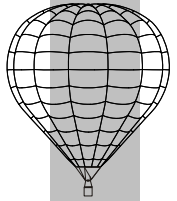


**BALLOON WORKS  
BASKETS , BURNERS and CYLINDERS**

N°	Basket Size (inches)	Type	Empty Weight (Kg)	UM Envelope size range
3100	49 x 53.5	Triangle	136	56 - 77
3101	45 x 61	Trapeze	136	56 - 77
3102	56 x 61	Triangle	146	56 - 90
3103	60 x 61	Trapeze	171	56 - 90
3104	59 x 65	Hexagon	186	77 - 240
3105	65 x 73	Hexagon	201	105 - 240
3106	75 x 80	Hexagon	240	105 - 240
3107	77 x 85	Hexagon	245	105 - 240
3108	48 x 40	Rectangle	145	56 - 77
3109	48 x 60	Rectangle	171	77 - 105
3110	72 x 60	Rectangle	420	105 - 210
3111	96 x 60	Rectangle	544	180 - 240
3112	120 x 60	Rectangle	660	210 - 300

Burner Type	Empty Weight (Kg)	UM Envelope size range
T-3		56 - 120
Mirage		56 - 120
Mirage Double		105 - 240

Cylinder Type	Empty Weight (Kg)	Fuel Capacity (Kg)	Basket range
Worthington	14	20	All


**S 1 9 O T H E R M A N U F A C T U R E R S E Q U I P M E N T**

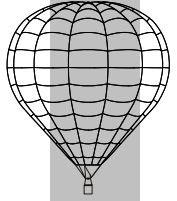

## KUBICEK BASKETS and BURNERS

Basket Size (cm)	Type	Empty Weight (Kg)	UM Envelope size range
0.88 x 0.88	K7(open)	50	31-56
0.88 x 1.16	K10(open)	60	56-77
1.16 x 1.16	K12(open)	80	65-90
1.16 x 1.16	K12a(open)	80	65-90
1.16 x 1.35	K15(open)	85	65-105
1.16 x 1.45	K16(open)	90	90-130
1.16 x 1.55	K18(open)	100	90-130
1.23 x 1.28	J1(open)	72	90-105
1.23 x 1.40	J2(open)	76	90-130
1.27 x 2.10	K25P(single partition)	140	120-180
1.66 x 2.60	K40Y (Y partition)	250	180-250
1.60 x 2.50	K32TT (TT partition)	170	180-250
1.60 x 3.00	K50TT (TT partition)	300	180-250

Burner Type	Empty Weight (Kg)	UM Envelope size range
H3	16	42-90
H3-D	20	42-160
HB2	24	42-160
Komet Duo (K10-K18)	21	42-160
Komet Duo (K25P)	24	42-160
H4 Triple	42	105-250
Shadow Triple	44	105-250
Ignis Double	23 to 43	65-160
Ignis Triple	41 to 59	145-250
Ignis Quadruple	56 to 102	210-425

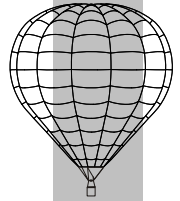


**SCHROEDER FIRE  
BASKETS BURNERS and CYLINDERS**

Basket Size (cm)	Type	Empty Weight (Kg)	UM Envelope size range
1.07 x 0.95	I/2	50	56-65
1.25 x 1.00	II/3	53	56-77
1.30 x 1.15	III/4	62	56-90
1.45 x 1.15	IV/5	68	77-120
1.55 x 1.20	V/5	77	90-130
1.75 x 1.25	VI/6	86	105-160
1.80 x 1.40	VII/7	146	145-210
2.15 x 1.40	VIII/8	152	145-210
2.35 x 1.40	VIII/9	206	160-250
2.50 x 1.70	IX/11	225	210-300
2.75 x 1.75	X/13	265	250-300

Burner Type	Weight (Kg)	UM Envelope size range
Optima I single	17	56-65
Optima II double	24	56-150
Optima IV double	24	56-150
FB V double	24	56-150
FB 6 double	24	56-160
Optima IV triple	34	130-160
FB V triple	34	130-250
FB 6 triple	34	130-250
FB V quad	43	210-300
FB 6 quad	43	210-300

Cylinder Type	Empty weight (Kg)	Fuel capacity (Kg)	Basket range
V 20	14	20	All
V 30	18	30	All
VA 50	15	21	All
VA 70	18	30	All

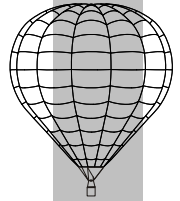


**FANTASY BASKETS**

Basket Size (in.)	Type	Weight (lbs) <small>inc. Instruments fire extinguisher and straps</small>	UM Envelope size range
47" x 47"	Fantasy (F)	146	65 - 90
47" x 56"	Fantasy (F)	170	65 - 120
42" x 42"	Mirage	140	56 - 77
42" x 50"	E - Type	154	56 - 90
42" x 56"	E - Type	164	65 - 120
46" x 70"	E - Type T partition	224	105- 120

**FANTASY BURNERS**

Burner Type	Basket Type applicability	Burner Weight (lbs)	UM Envelope size range
A - Type Single	47 x 47 F	20	56 - 90
F - Type Single	47 x 47 F	20	56 - 105
	47 x 56 F		
	42 x 42 Mirage		
	42 x 50 E		
	42 x 56 E		
A - Type Dual	47 x 56 F	35	56 - 105
F - Type Dual	47 x 56 F	35	56 - 120
	42 x 50 F		
	42 x 56 E		
	46 x 70 E		

- All UM envelopes to join with a non-rectangular basket (\*), must carry special wires to attach to 3 points according to TN010. In that case for balloons of size 160 and over will carry 2 karabiners each corner.
- Special Wires just can be fitted by Ultramagic or a qualified organization authorized by Ultramagic.

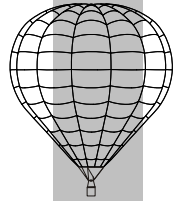


**SKY**  
**BASKETS BURNERS and CYLINDERS**

Basket Size (cm)	Type	Empty Weight (Kg)	UM Envelope size range
107 x 129	Simple	60	56-90
119 x 155	Simple	80	77-130
129 x 180	Simple,ST	100	105-145
157 x 207	ST	160	140-180
157 x 247	ST,DT	180	160-250
157 x 287	ST,DT	230	200-425
157 x 307	DT	260	180-300
157 x 327	DT	280	200-425
157 x 355	DT	300	200-425
157 x 407	DT	350	200-425
157 x 420	DT	400	300-425

Burner Type	Empty Weight (Kg)	UM Envelope size range
Mistral double	22	56-210
Mistral triple	35	180-300
Mistral quad	44	250-425

Cylinder Type	Empty Weight (Kg)	Fuel Capacity (Kg)	Basket range
V-30	18	30	All
V-40	20	40	All

**S 1 9 O T H E R M A N U F A C T U R E R S E Q U I P M E N T**

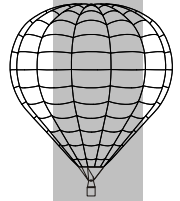


**RAVEN - AEROSTAR  
BASKETS BURNERS and CYLINDERS**

Basket Size (cm)	Type	Empty Weight (Kg)	UM Envelope size range
102 X 80	ELS	40	65-90
121 X 80	ELSS	54	65-90
122 X 107	RWS, RWSW & RWSX-AFX	60	77-105
145 X 119	CW & CW-AFX	95	65-140
168 X 119	CWS	101	90 - 170
173 X 119	RB5	132	130 - 170
178 X 127	RB6	148	130 - 250
193 x 127	TWX	148	130 - 250
231 X 127	RB8	179	160 - 250
230 x 160	NC5	175	160 - 250
246 x 141	RB12	193	180 - 250

Burner Type	Type	Weight (Kg)	UM Envelope size range
Aurora S	Single	11	31 - 90
HPIII S	Single	12	65 - 105
HPIII D	Dual	21	65 - 170
HPIII T	Triple	30	160 - 170
HP6D/HP5D	Double	21	56 - 250
HP6S/HP5S	Single	12	56 - 105
HP6E/HP5E	Double	22	56 - 250
HP6T	Triple	30	160 - 250

Cylinder Type	Full weight (Kg)	Fuel capacity (US gallons at 85% fill)	Basket range
15 gallons stainless steel (V-15)	50.5	15	Refer to applicable Aerostar - Raven Flight Manual
18 gallons stainless steel (V-18)	57.5	18	Refer to applicable Aerostar - Raven Flight Manual
20 gallons stainless steel (H-20)	63.0	20	Refer to applicable Aerostar - Raven Flight Manual
23.5gallons stainless steel (V-23)	74.0	23.5	Refer to applicable Aerostar - Raven Flight Manual
25 gallons stainless steel (H-25)	79.3	25	Refer to applicable Aerostar - Raven Flight Manual
10 gallons aluminum (V-10)	35	10	Refer to applicable Aerostar - Raven Flight Manual

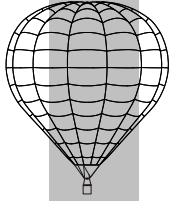


## ALTISPH'AIR / AAC / CHAIZE BASKETS

Basket Size (cm) Length x Width x Height	Type	Empty Weight (Kg)	UM Envelope size range
1.10 x 1.11 x 1.15	A101	70	42 - 90
1.30 x 1.10 x 1.15	A201	76	65 - 130
1.30 x 1.20 x 1.15	A201C	80	65 - 130
1.50 x 1.10 x 1.15	A301	80	77 - 160
1.50 x 1.10 x 1.15	A302	85	77 - 160
1.50 x 1.10 x 1.15	A303 T-separation	88	90 - 160
1.70 x 1.30 x 1.20	A401	92	105 - 180
1.70 x 1.30 x 1.20	A403	110	105 - 180
1.70 x 1.30 x 1.20	A403 T-separation	115	105 - 180
2.00 x 1.50 x 1.20	A501	125	120 - 250
2.00 x 1.50 x 1.20	A503	135	120 - 250
2.00 x 1.50 x 1.20	A503 T-separation	145	120 - 250

- See General Notes below

### Notes :

- Dimensions of the basket are external in the base.
- ST means Single Partition and DT Double Partition.
- UM envelope sizes are given in thousands of cubic feet, so 65 mean 65000 ft<sup>3</sup>.

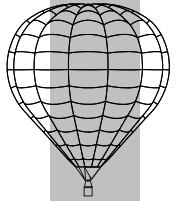

### **19.8.2 OTHER MANUFACTURERS EQUIPMENT. NON-BASKET BALLOONS**

The following table gives a list of non - basket bottom end systems which may be used with Ultramagic envelopes.

Other manufacturers Duo and Sky Chariot bottom end equipment includes as a system the specific burner and/or cylinder models inherent to the manufacturers design and as detailed by that associated manufacturer. As such their use is therefore permitted.

In all cases, it is required to follow applicable bottom end manufacturer's supplement.

<b>Manufacturer</b>	<b>Type</b>	<b>Empty Weight (Kg) without cylinder</b>	<b>UM Envelope size range</b>	<b>Rotation vents required (Y/N)</b>
Cameron	Skyhopper	15 kg	31 - 42	Yes
Cameron	Skyhopper Millenium	15 kg	31 - 42	Yes
Cameron	Duo Airchair / Duo Airchair MKII	24 kg	31 - 77	Yes
Lindstrand	Cloudhopper	15 kg	31 - 42	No
Cameron/T&C	Cloudhopper	15 kg	31 - 42	No
Cameron/T&C	Single Skychariot	15 kg	31 - 42	Yes
Cameron/T&C	Two seat Skychariot	24 kg	31 - 77	Yes