

ULTRAMAGIC FLIGHT MANUAL SUPPLEMENT 39

ULTRAMAGIC 'TEKNO' BASKETS

39.1 GENERAL INFORMATION

This supplement details the instructions and limitations necessary to ensure the safe operation, maintenance and continued airworthiness of CT-01, CT-02 and CT-03 Ultramagic 'Tekno' Baskets.

The section indexes on this supplement are preceded with the §39.X, and the suffix is kept in line with the Ultramagic Flight Manual. The content of this supplement replaces or appends the information contained on the Flight Manual for the balloon or parts to which this supplement is intended.

39.2 OPERATIONAL LIMITATIONS

The following limitations are additional to those already stated in the Flight Manual.

39.2.3.1 Acceptable Damage

Add the following:

Damages or cuts on the fabric walls are allowed unless the consistency of the walls is jeopardized or passing holes larger than 5 cm diameter are present. No cracks or damages are allowed on the steel structure. Any crack longer than 15 cm and 3 mm depth (two cross-banded veneers) or more in the plywood floor is not allowed.

39.2.4 Minimum Equipment


Amend point 1: 1 kg dry powder fire extinguisher conforming to EN3

39.2.6 Loading

Applicable loading parameters are listed on section 39.5 of this supplement.

39.2.7 Crew

Maximum number of occupants is described on section 39.D.

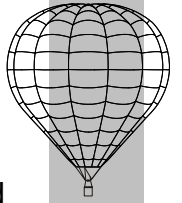

39.2.13 Fuel cylinders

2. For cylinders installed inside the basket, the cross-harness supplied must be fitted to each cylinder. These should be fixed so as not to allow any up and down as well as lateral movement, as shown in the following Figure 1:

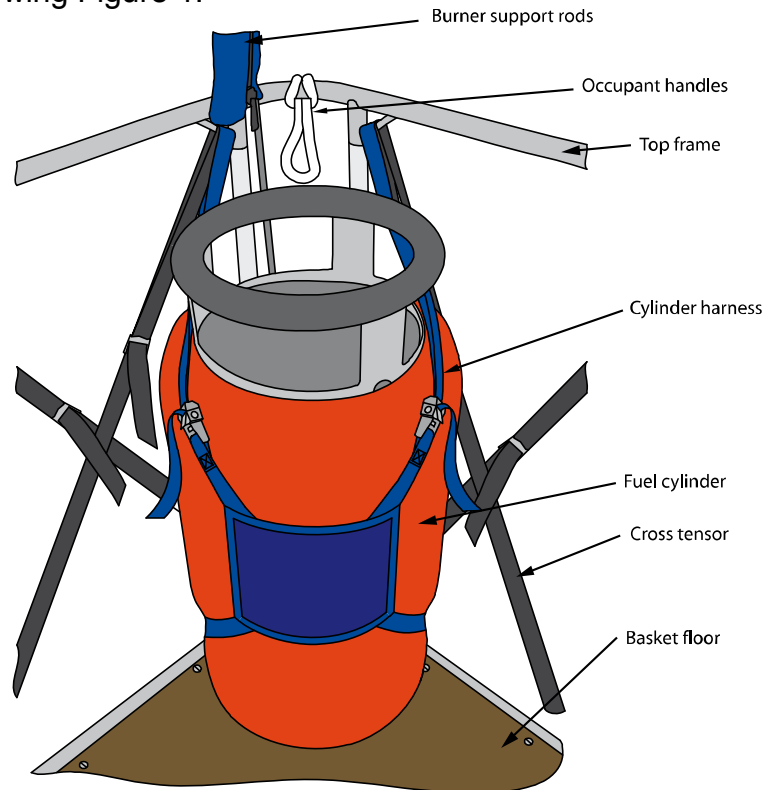


Figure 1 – Cylinder installation inside the basket

When optional external fittings for fuel cylinders are installed, 2 or 4 cylinders may be carried in pairs on the short sides of the basket. Each pair of cylinders must be fitted using two horizontal straps, two support brackets and the two suspension straps provided on the basket top frame, as shown on Figure 2.

NOTE: Only M-20, M-20D, M-30, M-30D or Worthington cylinders, or a combination of them, may be installed externally to the 'Tekno' basket. Only cylinders of the same type may be mounted together externally on the same side of the basket.

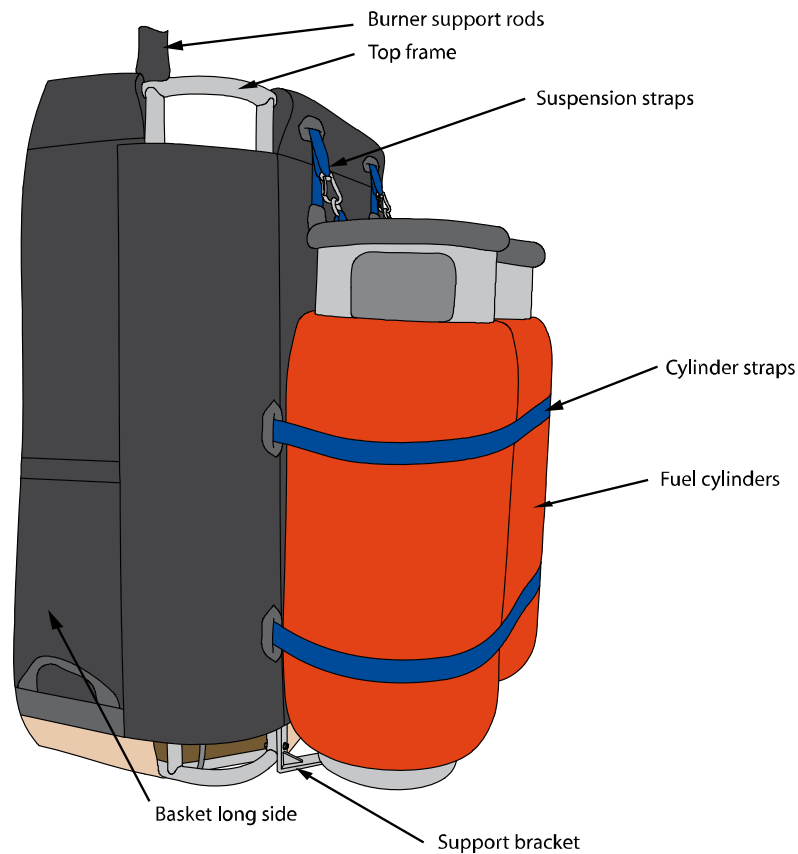
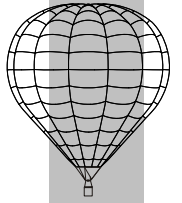


Figure 2 – Cylinder installation outside the basket (optional fitting - accessory)

39.2.14 Tethered Flight

Tethered flight is not allowed if the wind speed in surface is above 10 knots (5 m/s or 18.5 km/h).

39.3 EMERGENCY PROCEDURES


No change.

39.4 STANDARD PROCEDURES

The following procedures are additional to those already contained in the Flight Manual.

39.4.5.1.4 Basket

Proceed as per 39.4.5.5 and refer after to 39.D for specific pre-flight checks.

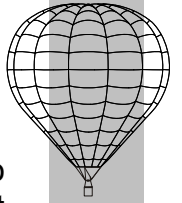

39.4.5.5 Mounting the 'Tekno' Basket

The 'Tekno' basket is supplied with a transportation bag specially designed to protect the components during handling and storage, as well as to allow a neat organisation of its parts. When the basket must be mounted, proceed as follows:

- Deploy the body of the basket over a flat surface. Make sure that the basket floor is underneath.
- Take 8 white rods from the bag and fit each end in the sockets of the basket bottom structure.
- Lift up the top frame and position the upper end of the rods in its sockets.
- With the main structure up, unfold the wall panels out of the basket, and put the fuel cylinders into the basket.
- A set of 8 tapes fitted with buckles is provided.
- Pass each tape in diagonal joining two opposite corner eyelets, leaving them a bit loose. Make sure that their buckles are not entangled. Repeat the operation with all the tapes. Finally tighten firmly the 8 tapes.
- Using the harness arrangement provided, attach firmly the cylinders to the corners as per 39.2.13(2), paying attention to the balance of the basket. Secure the two carbine hooks to the bottom corner brackets.
- Lift the panels up and attach them around the top frame by means of the two Velcro tapes provided. Make sure the panel and the fixings are tight.
- Unfold the corner covers of each straight panel and tighten them over the walls of the long side by using the Velcro bands.

CAUTION: The whole structure must remain inside the boundary formed by the fabric walls, with the exception of the external fitting for fuel cylinders.

- Proceed with the rigging as per section 4.5.2 of the Flight Manual.

39.4.11.5 Installation of external cylinders (optional)

If the 'Tekno' basket is provided with external fittings for fuel cylinders, pilot may install up to 4 cylinders on them. To install the fuel cylinders refer to Figure 2 and proceed as follows:


- Make sure that the cylinder support brackets located at the basket bottom edge are not damaged and are firmly secured to the basket sockets.
- Place each cylinder over a bracket checking that the bracket hook joins the cylinder bottom ring.
- For CT-02 external fuel cylinders fitment, place and secure the padded spacer provided.
- Secure all cylinder suspension straps rigging their Carbine hook to the ring placed at the end of the strap. Make sure that the cylinder top ring is engaged.
- Fasten the horizontal straps around the cylinders installed on one side of the basket. Note that these straps must be passed through the holes of the basket corners, lacing the cylinders to the adjacent wall and nylon rods.

NOTE: Observe the limitations listed on 39.2.13.

Information regarding to the assembly or removal of the external support brackets may be found on Supplement 18 to the Ultramagic Maintenance Manual.

39.4.11.6 Folding the 'Tekno' Basket

To fold the basket after flight, proceed in reverse order to the steps of 39.4.5.5. If the basket has suffered a hard landing, follow section 6.7.3 of the Maintenance Manual and Supplement applicable before next flight.

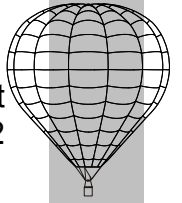

39.5 LOADING**39.5.2 Table of Empty Weight and Maximum Lift**

For the calculations in the Load Chart of chapter 5 of the Flight Manual will be used the following characteristics:

Model	V	Pv			Lmax		
		CT-01	CT-02	CT-03	CT-01	CT-02	CT-03
S-50	1415	99	120	102	500	500	500
S-70	1982	113	135	116	515	650	559
S-90	2550	N/A	167	149	N/A	768	593
S-105	2950	N/A	176	156	N/A	777	602
H-31	900	98	N/A	101	307	N/A	307
H-42	1200	107	128	110	416	416	416
H-56	1590	123	144	126	527	549	549
H-65	1840	132	153	135	536	638	584
H-77	2200	137	158	140	541	756	589
V-56	1590	126	147	129	530	549	549
V-65	1840	132	153	135	536	638	584
V-77	2180	136	157	139	540	756	589
V-90	2550	N/A	169	151	N/A	770	595
V-105	2950	N/A	181	163	N/A	782	607
M-42	1200	112	133	115	414	414	414
M-56	1590	123	144	126	527	550	550
M-56c	1590	127	148	130	531	550	550
M-65	1840	133	154	136	537	638	585
M-65c	1840	137	158	140	541	635	589
M-77	2200	135	156	138	539	756	587
M-77c	2200	141	162	144	545	756	593
M-90	2550	N/A	171	153	N/A	772	597
M-105	2950	N/A	183	165	N/A	784	609
Z-90	2550	N/A	167	149	N/A	768	593

V = volume [m³]

Pv = Empty weight (without any cylinder) [Kg]


Lmax = Maximum authorised Lift [Kg]


39.5.4 Table of Compatibility

Envelopes listed on 39.5.2 are considered compatible with the CT-01 and CT-02. CT-03 'Tekno' Basket is only compatible with model B-70, in accordance with FM Supplement 46.

'Tekno' baskets are approved for flight using the following burners:

- MK-21 Single
- BMK-008 Single
- MK-21 Double (only CT-02 and CT-03)
- BMK-008 Double (only CT-02 and CT-03)

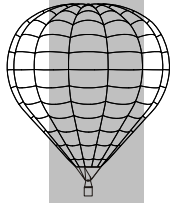

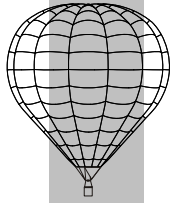

39.6 BALLOON AND SYSTEMS DESCRIPTION

39.6.3 Dimensions and Weights

See following table corresponding to mass and dimensions:

BASKET	CT-01	CT-02	CT-03
Length* (m)	1,0	1,2	1,2
Width (m)	0,8	1,0	0,8
Wall height (m)	1,1	1,1	1,1
Empty Mass* (kg)	35	49	38
Min Karabiners Strength (kN)	0,9	2,5	0,9

* Fuel cylinders, burner and burner frame not included

39.7 BALLOON HANDLING, MAINTENANCE AND CARE

Follow instructions as per Maintenance Manual and its Supplement nr. 18.

39.8 OTHER MANUFACTURERS EQUIPMENT


No change.

39.C QUICK REFERENCE PRE-FLIGHT CHECKLIST

Replace Basket pre-flight checklist with the following:

Basket

1. Check the general condition of the basket for damage.
2. Ensure that the basket wires are free of damage and twists.
3. Ensure that the burner frame and poles fit correctly and are free of damage.
4. Ensure that the attachment points are secure and that all karabiners are screw-locked.
5. Make sure that cross-tensor tapes are correctly fitted and tightened.
6. Check that wall panels are firmly closed and tightened.
7. If fitted, check that external fuel cylinders are mounted as per 39.4.11.5.

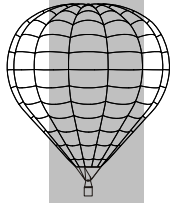

39.D MINIMUM BASKET SPACE REQUIREMENTS

Consider the following table

Model	Basket Specs.			Capacity		
	Width	Length	Max Load	Cylinders Inside	Cylinders Outside*	Maximum Occupants
CT-01 Tekno	0.8 m	1.0 m	401 kg	Up to 4	0, 2 or 4	1
				Up to 2	0, 2 or 4	2
				0	2 or 4	3
CT-02	1,0 m	1,2 m	650 kg	Up to 4	0, 2 or 4	2
				Up to 3	0, 2 or 4	3
				Up to 1	2 or 4	4
CT-03	0,8 m	1,2 m	488 kg	Up to 4	0, 2 or 4	1
				Up to 2	0, 2 or 4	2
				0	2 or 4	3

* If optional fittings are installed

S 3 9 - T E K N O - B A S K E T S